


# Installation Drawing

Firestopping around steel work

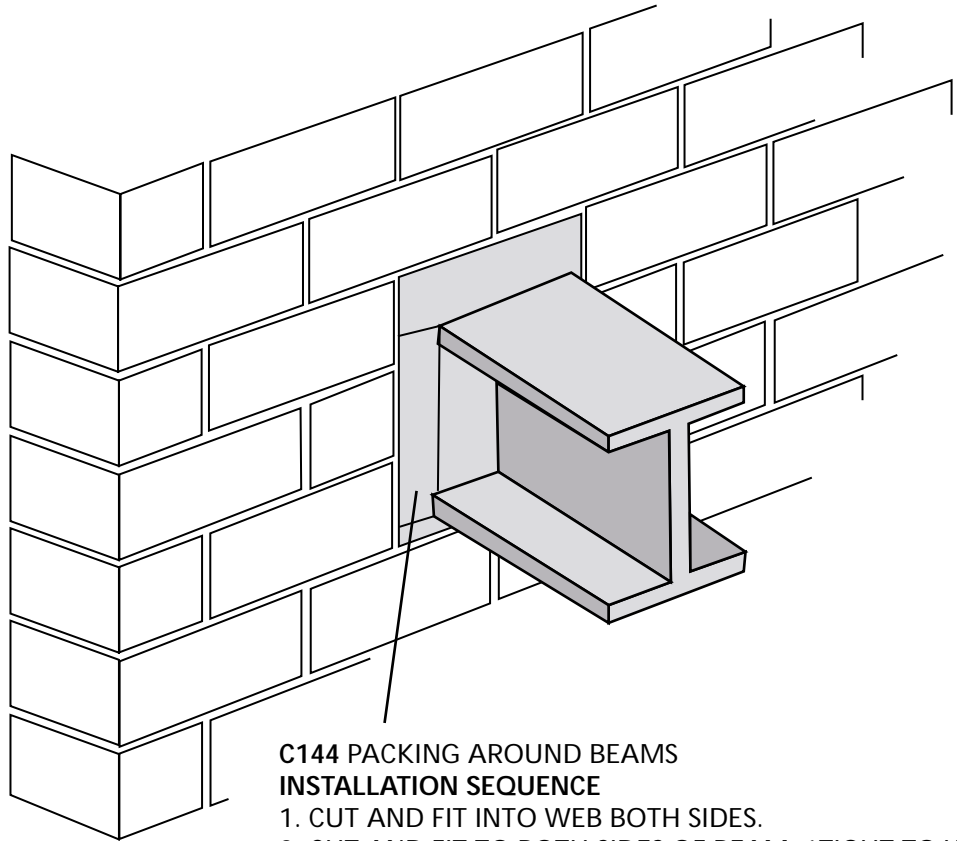

## **C144 PACKING AROUND BEAMS INSTALLATION SEQUENCE**

1. CUT AND FIT INTO WEB BOTH SIDES.
2. CUT AND FIT TO BOTH SIDES OF BEAM. 1TIGHT TO WALL.
3. CUT AND FIT ABOVE AND BELOW BEAM.
4. THICK COAT OF FIRECHECK TO BOTH SIDES.  
OVERLAP ON BLOCKWORK BY APPROX. 25mm.